

# How to apply Wall Graphic Murals (Semi-Perm)



See our *How 2: Wall Mural* video at <https://youtu.be/YaFHz3fQLg>

## You will need:

- Masking tape
- Blue Squeegee (included)
- Lead Pencil
- Tape measure
- Two people

## Before Starting:

- Clean & dry wall/window & hands.
- Ensure you are applying mural to a smooth surface.
- Ensure the overall mural will fit the desired space.
- Panels have been marked 1-4. Panels overlap and meet (marked).

## Application steps:




**1** Mark the position of panel '1' using your measuring tape or ruler. Use small pieces of masking tape that will act as guides. Correct positioning of panel 1 is important.



**2** Remove panel marked '1' from its backing paper. **Tip:** Make sure the adhesive side doesn't come into contact with itself or anything other than the wall or window.



**3** Line up panel '1' just inside your masking tape guides. These guides are acting as a straight edge. Apply the top 10-15cm to the wall to secure. The rest of the graphic can now hang down.

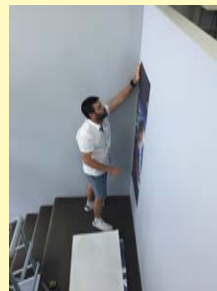

**4** Step back and check the positioning of the panel. Take some additional measurements to a known straight edge and if required reposition your graphic.



**5** When you are happy, take your blue squeegee and using the felt edge, firmly smooth the wall graphic onto the wall. Start from the top and move downwards.



**6** ...Mark the top edges for your next panel with masking tape guides. Panel 2 will overlap Panel 1. We have marked the overlap with masking tape on both panels so ensure they line up and meet.



**7** Repeat steps 1-5 until finished. Pay particular attention to ensure the images on each panel line up especially where there is text.



**8** When you are finished, carefully remove the masking tape guides from the wall and mural panels. Go over the panels again paying particular attention to the overlaps.